














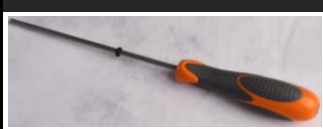








UNIVERSAL TOOLBOX COD.1003



	<p>504</p>	<p>monodose antifriction grease (5 tubes) (discount B)</p>
	<p>1006</p>	<p>Universal suspension pressurisation kit (scale 0-25 bar)</p>
	<p>1010 1011 1012 1013</p>	<p>6mm Diam int.hole shims box (spess. 010/015/020/025/030) 6mm extra (from Ø19 to 24) 8mm diam int.Hole shims box (spess. 010/015/020) 12mm Diam int.hole shims box (spess. 010/015/020/025/030)</p>
	<p>1104 1104/1 1104/2</p>	<p>Innertube tightener Ø 14 Innertube tightener Ø 18 Innertube tightener Ø 16</p>
	<p>1106</p>	<p>Separator Leveler</p>
	<p>1110</p>	<p>WP shocks pressurization tool</p>
	<p>1115</p>	<p>Oil recovery tool</p>
	<p>1118</p>	<p>Hydraulic shock Springs disassembler</p>
	<p>1119</p>	<p>cap separator tool Showa/Kayaba</p>

	1121	Fork and shock supports
	1122	Graduated Ohlins separator level tool
	1123	Ohlins Separator cap tool
	1126	Shims measurer tool
	1131	Pressurization tool tubes kit
	1132	Lenght measurer tool for shocks
	1136/41 1136/43 1136/45 1136/46 1136/47 1136/48 1136/50	Innertube polishing tool Ø 41 Innertube polishing tool Ø 43 Innertube polishing tool Ø 45 Innertube polishing tool Ø 46 Innertube polishing tool Ø 47 Innertube polishing tool Ø 48 Innertube polishing tool Ø50
	1149	Teflon vice support L. 120 mm
	1205	Shaped Vice Ø 14, 16, 18
	1205/1	Shaped Vice Ø 8, 12, 12.5

	<p>1213/35 1213/36 1213/37 1213/41 1213/43 1213/45 1213/46 1213/47 1213/48 1213/49 1213/50</p>	<p>Oil seal assembler Ø 35 Oil seal assembler Ø 36 Oil seal assembler Ø 37 Oil seal assembler Ø 41 Oil seal assembler Ø 43 Oil seal assembler Ø 45 Oil seal assembler Ø 46 Oil seal assembler Ø 47 Oil seal assembler Ø 48 Oil seal assembler Ø 49 Oil seal assembler Ø 50</p>
	<p>1214/41 1214/43 1214/45 1214/46 1214/47 1214/48 1214/49 1214/50</p>	<p>Bush modifier support Ø 41 Bush modifier support Ø 43 Bush modifier support Ø 45 Bush modifier support Ø 46 Bush modifier support Ø 47 Bush modifier support Ø 48 Bush modifier support Ø 49 Bush modifier support Ø 50</p>
	<p>1219</p>	<p>Front fork spring-pusher tool</p>
	<p>1221/01</p>	<p>Hand grip for innertube disassembler tool</p>
	<p>1221/41 1221/43 1221/45 1221/46 1221/47 1221/48 1221/49 1221/50</p>	<p>Innertube-axle clamp disassembler kit Ø 41 (without handgrip) Innertube-axle clamp disassembler kit Ø 43 (without handgrip) Innertube-axle clamp disassembler kit Ø 45 (without handgrip) Innertube-axle clamp disassembler kit Ø 46 (without handgrip) Innertube-axle clamp disassembler kit Ø 47 (without handgrip) Innertube-axle clamp disassembler kit Ø 48 (without handgrip) Innertube-axle clamp disassembler kit Ø 49 (without handgrip) Innertube-axle clamp disassembler kit Ø 50 (without handgrip)</p>
	<p>1223</p>	<p>Trimmed tool for shaft holding</p>
	<p>1224</p>	<p>Double U tool for shaft</p>