



Kit Contents		
Description	Part No	Pcs
Cables ties 4,8x290		4
Cable ties 3,5x190		6
Holder plate front		1
Holder plate rear		2
Connector		4
Pin contact		8
Heat shrink		4
Screw M4x8		8
Screw M4x5		8
Nut M6		1
Screw M6		2
Cancellation kit (350 mm)		1
Cancellation kit (1000 mm)		3

**Note!**

*Please note that this image is a general representation of the product and may differ slightly from your product.*

**Cancellation kit PASM, Porsche 987**

**35020-08**

**Mounting Instructions**

# MOUNTING INSTRUCTIONS

## **⚠ Warning!**

*It is advisable to have an Öhlins dealer install the cancellation kit.*

## **⚠ Warning!**

*If working on a raised vehicle, ensure it is securely supported.*



## **Preparation:**

**1**

Cut off 150 mm / 5,9 inch of the standard damper control cable.




**2**

Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation. Attach the heat shrink tube.



**3**

Install the supplied pin contact with a correct tool.

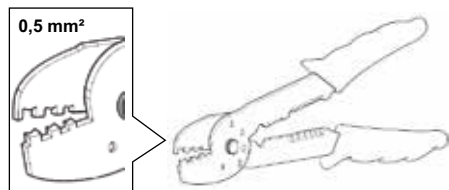

**4**

Insert the completed wire into the connector until to the lock. After this lock the connector and move the heat shrink tube to the middles of the connector / the wire and heat it. The pinposition / cable colour is not relevant.




# MOUNTING INSTRUCTIONS

## Front axle:

5

Install the cancellation kits with the supplied M4 screws on the holder plate.

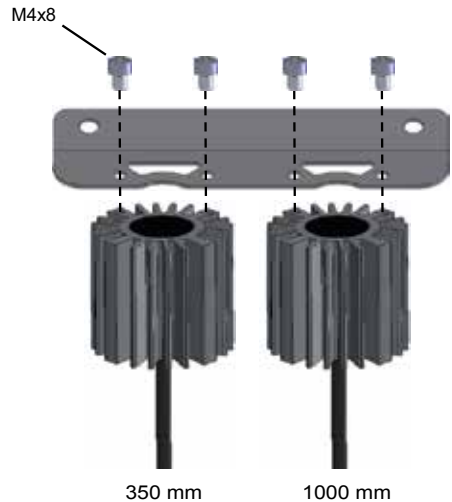

6

Install the cancellation kit and the holder with the supplied screws and a stopp nut in the vehicle. The assembly position is beside the battery.

### **⚠ Caution!**

*The cancellation kit gets very hot! All attached lines within a distance of 2 cm / 0,8 inch have to be removed further away from the kit.*



# MOUNTING INSTRUCTIONS

## Front axle:

7

Run the standard damper control wire with adapter to the cancellation kit connector.

Insert the standard connector into the cancellation kit connector until it locks.

Fix the wire with cable ties.

Right vehicle side



Left vehicle side



# MOUNTING INSTRUCTIONS

## Rear axle:

8

Install the cancellation kit and the holder on the standard screws of the rear lights. The assembly position is under the convertible top.

### ⚠ Caution!

*The cancellation kit gets very hot! All attached lines within a distance of 2 cm / 0,8 inch have to be removed further away from the kit.*

Left vehicle side



Right vehicle side



Run the standard damper control wire with adapter to the supplied cancellation kit connector. Insert the standard connector into the supplied cancellation kit until it locks and reassembly the cover.

**⚠ Caution!**

*The cancellation kit gets very hot! All attached lines within a distance of 2 cm / 0,8 inch have to be removed further away from the kit.*

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI\_35020-08\_0  
Issued 2016-05-16

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB  
Box 722  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00  
fax +46 8 590 025 80

