

Kit Contents

Description	Part No	Pcs
Shock absorber	HO701	1
Sticker	00192-01	2
Mounting rubber	00230-01	2
Tie rap	00231-01	2
Hose clamp	00643-03	2
Sticker memo notes	01180-01	1
Owner's manual	07241-02	1

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber/front fork/steering damper is an important part of your vehicle and will affect the stability.

Shock absorber for Honda VTR 1000

HO 701

Mounting Instructions



MOUNTING INSTRUCTIONS

Warning!

It is advisable to have an Öhlins dealer install the shock absorber/front fork/steering damper.

Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip.

Note!

Before mounting this product clean the vehicle thoroughly.

Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

1

Put the motorcycle on a workstand so that the rear wheel barely touches the ground. Remove the seat and side covers. Loosen the rear frame.

2

Remove the shock absorber mounting bolts and then the shock absorber.

3

Install the shock absorber with the reservoir to the left, and the pre-load adjuster to the right. Mount the upper and lower shock mounting bolt.

4

Reinstall the rear frame. Install the reservoir on the left side with the mounting rubbers (230-01) and the hose clamps (643-03) according to the sketch.

5

Mount the hydraulic pre-load adjuster on the right side of the bike at the silencer bracket according to the sketch. Tie up the hose with the ty-rap (231-01)

6

Check that all bolts are tightened and that there are no clearance problems when the rear wheel is moving. Mount the side covers and the seat.



Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.

Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/steering damper when the suspension is fully compressed or extended.

MOUNTING INSTRUCTIONS

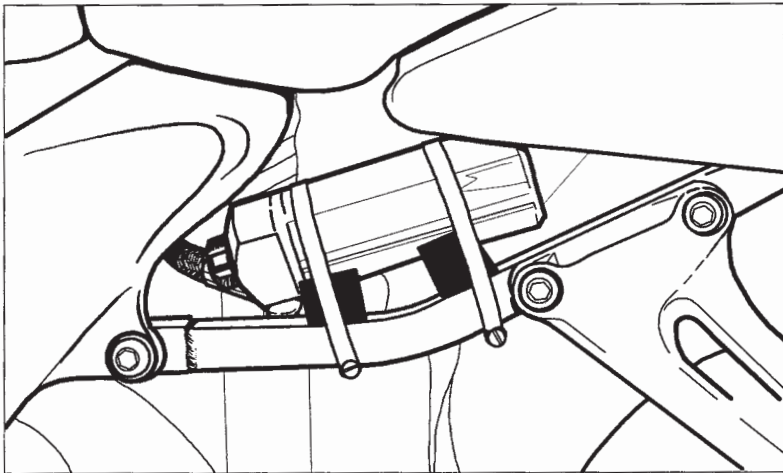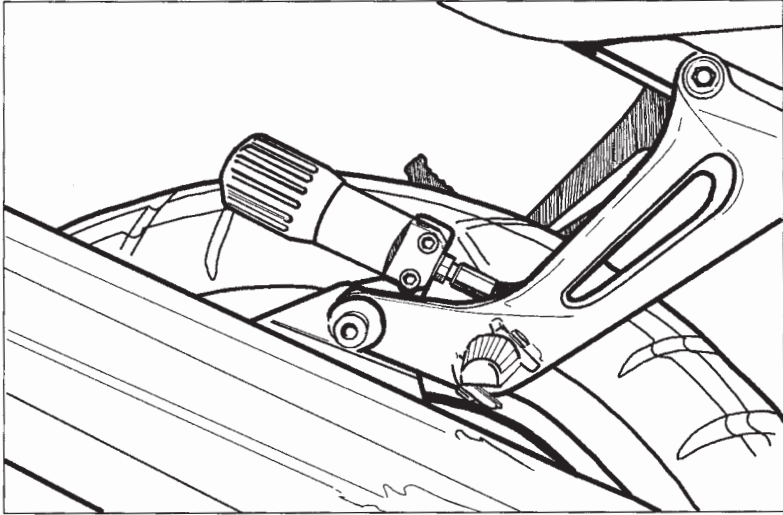


ADJUSTMENTS

Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

SET-UP DATA

Length	346	mm
Stroke	60	mm
Rebound	14	clicks
Compression	12	clicks
Spring preload	13	mm

 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HO701_0
Issued 2000-01-05

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com