
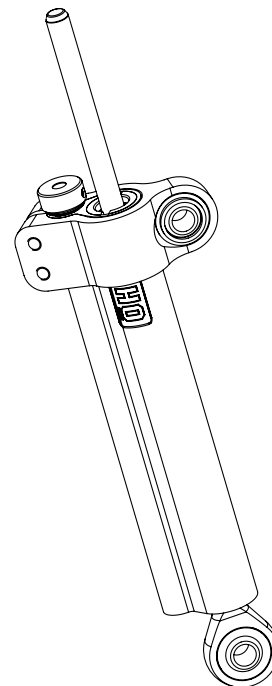


ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

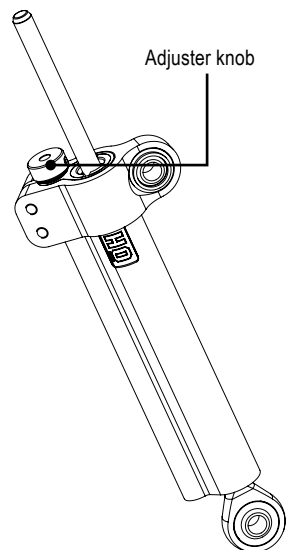

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

	Part No	Pcs
Steering damper, stroke 68	02261-20	1
Screw M8x40	01046-21	1
Screw M8x55	01046-27	1
Bracket assembly	02230-15	1
Sleeve	02238-08	1
Sleeve	02238-10	1
Sleeve	02238-11	1
Spacer	02259-01	1
Öhlins sticker	00192-01	2
Owner's Manual	07261-01	1

SET-UP DATA

Recommended set-up 7 clicks

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

👁 Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber/front fork/steering damper is an important part of your vehicle and will affect the stability.

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_SD037_0
Issued 2011-12-15



© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com

Steering Damper for BMW R1200R

SD 037

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber/front fork/steering damper.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip.

👁 Note!

Before mounting this product clean the vehicle thoroughly.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

- 1 Remove brake calipers on both sides.
- 2 Remove the front wheel.
- 3 Remove the front fender.
- 4 Loosen the front steering damper attachment. The nut is located under the front fork yoke.
- 5 Remove the rear steering damper attachment.
- 6 Mount the Öhlins steering damper with all mounting components according to the exploded view.
- 7 Adjust the steering damper by letting it slide in its bracket assembly. The steering damper should have similar stroke length both ways.

8

Tighten the two bracket screws.
Use 6 Nm torque.

👁 Note!

Make sure that the steering has clearance for turning both to the left and to the right end positions, and that the damper is not used as a stop.

9

Remount all standard components.

10

Read more about the steering damper and its different settings in your Öhlins Owners Manual.

👋 Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the steering damper.

MOUNTING INSTRUCTIONS

